


EXTRON MAAP PLATE INSTALLATION INSTRUCTIONS

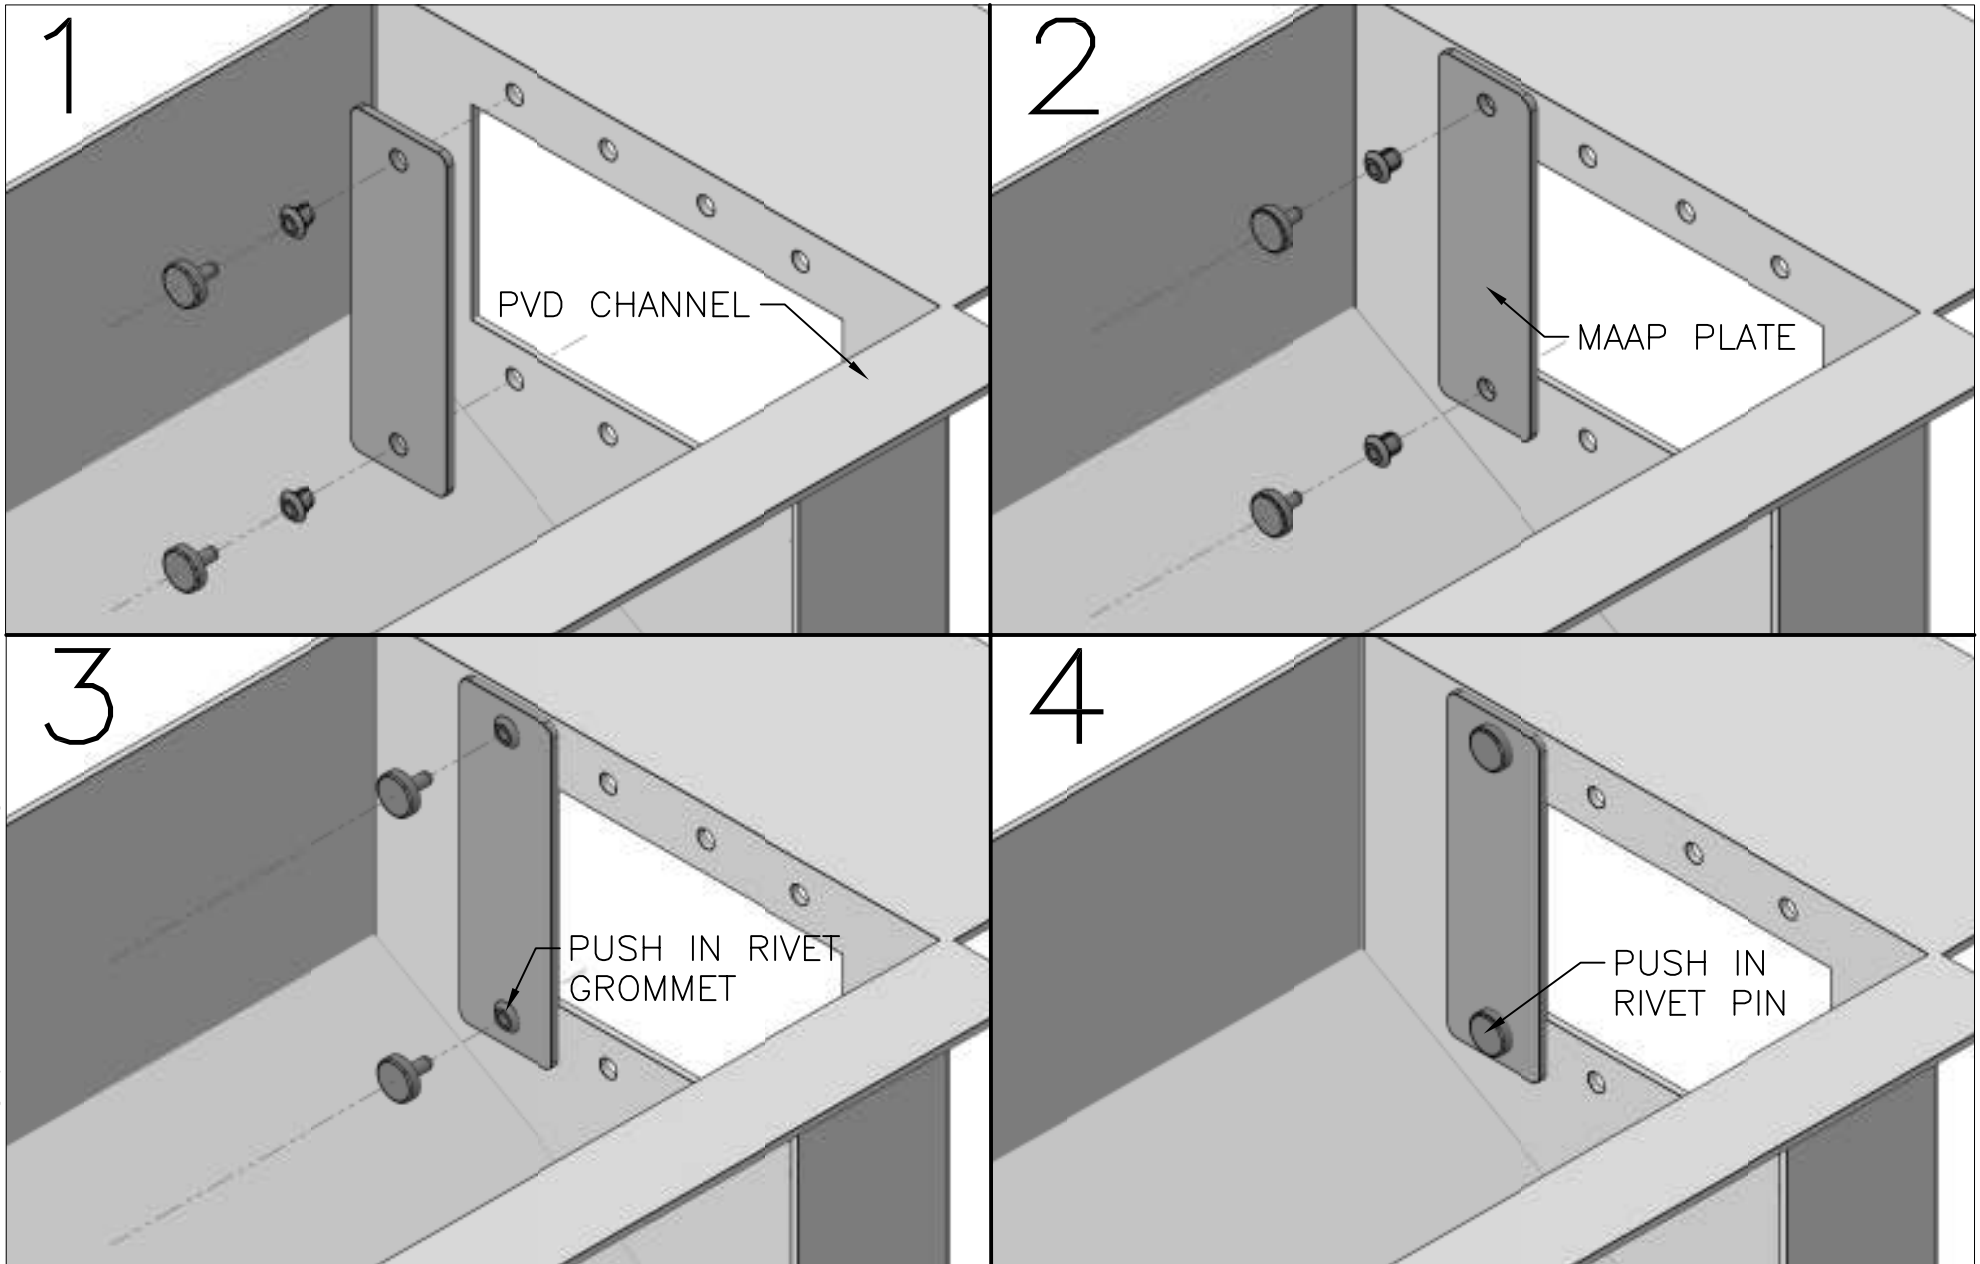

H:\PVD\MAAP PLATE INSTALLATION.dwg, Layout 1, 11/1/2012 9:12:35 AM, JSHaugen, Letter, 1:1

1. GATHER THE MAAP PLATE AND 2 PUSH IN RIVETS
2. ALIGN MAAP PLATE WITH HOLES IN PVD CHANNEL
3. INSERT PUSH IN RIVET GROMMETS THRU MAAP PLATE AND PVD CHANNEL
4. FULLY INSERT RIVET PIN INTO RIVET GROMMET